


## PassivePoe™ Set

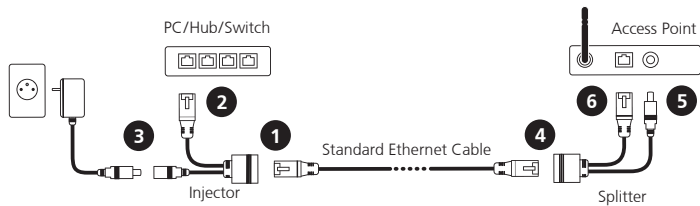


### On the lower end:

- 1 Connect network cable to RJ45 female connector of Passive PoE™ Injector
- 2 Connect RJ 45 male connector of Passive PoE™ Injector to lower end device (PC/Hub/Switch)
- 3 Connect DC connector of Passive PoE™ Injector to DC power source

### On the upper end:

- 4 Connect network cable to RJ45 female connector of Passive PoE™ Splitter
- 5 Connect the DC connector of Passive PoE™ Splitter to DC connector of device you intend to power using Passive PoE™
- 6 Connect RJ 45 male connector of Passive PoE™ Splitter to ethernet port of device you intend to power using Passive PoE™

## PassivePoe™ Injector

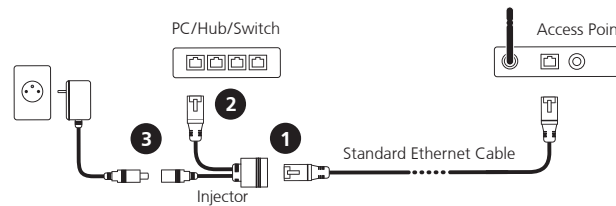


### Installation Instruction

- 1 Connect network cable to RJ45 female connector of Passive PoE™ Injector
- 2 Connect RJ 45 male connector of Passive PoE™ Injector to lower end device (PC/Hub/Switch)
- 3 Connect DC connector of Passive PoE™ Injector to DC power source

## Installation in Panel

### Download:

DIY Hole\_for\_Passive\_PoE.DXF

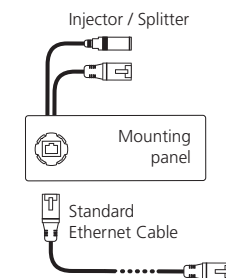

### Installation Instruction

- 1 Insert PoE into the cut-out as shown on picture
- 2 Rotate PoE for about 45 degrees, until you feel click
- 3 Installation is completed

