



User Guide

SH-WB GO Series

SH-30WB-GO


SH-60WB-GO

SH-90WB-GO



Package Contents

1

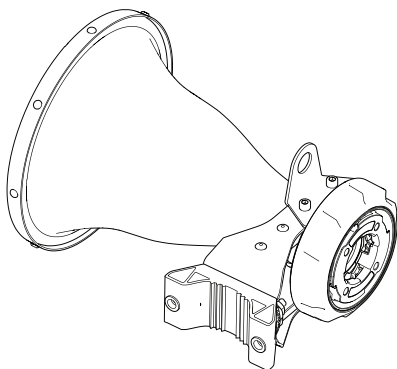

2




3





Number	Description	Quantity
1	Antenna	1x
2	Bracket Clamp	1x
3	M8 x 80 mm DIN 6921 Screw	2x

Installation Guide

Ensure correct antenna orientation: the eyelet must be on top and the drain hole must face down.


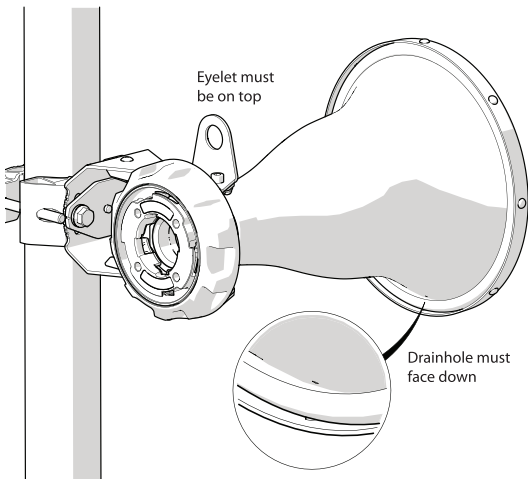


Use 13 mm Ratchet Wrench

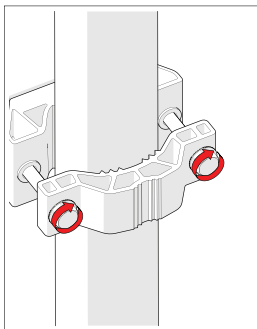
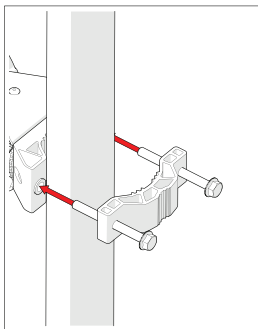


Installation Guide

Install the Pole Mount Bracket as shown for pole diameter range **40 - 57 mm**.

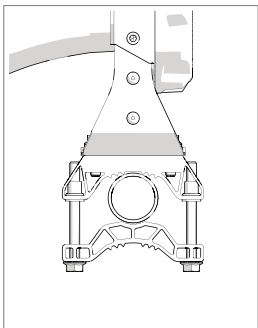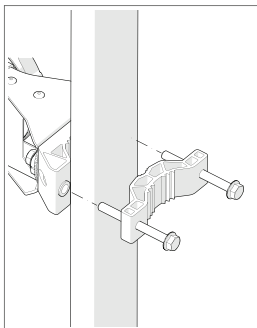


Install the Pole Mount Bracket as shown for pole diameter range **58 - 80 mm**.

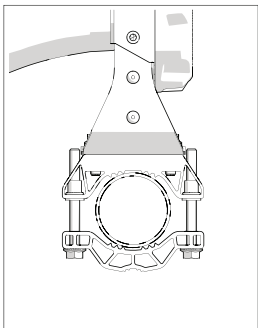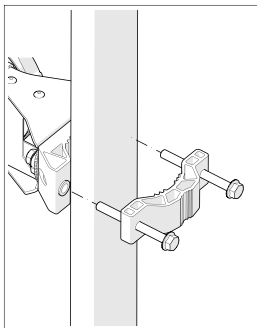


Installation Guide

Set the tilt. The grooves on the side serve as a simple scale in 10° steps, with an adjustment range of +25° / -25°.

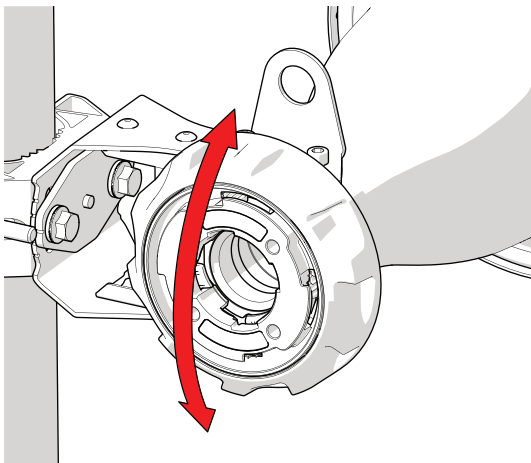


Use 13 mm Ratchet Wrench to tighten the bolts.

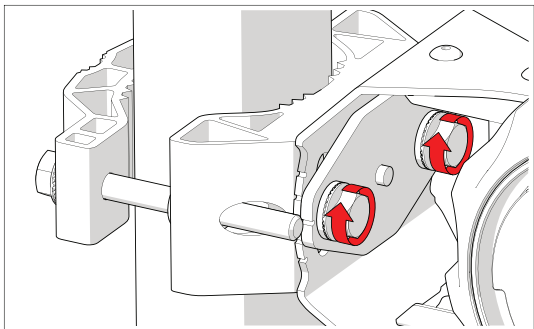


Pre - Installation

Left side of the pole

Use 5 mm Hex Key to release the four screws.

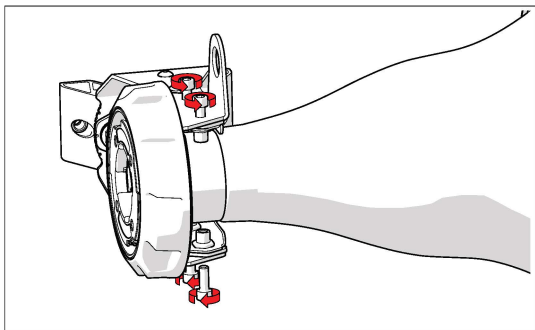


Detach the bracket from the antenna and mount it on the right side of the antenna.

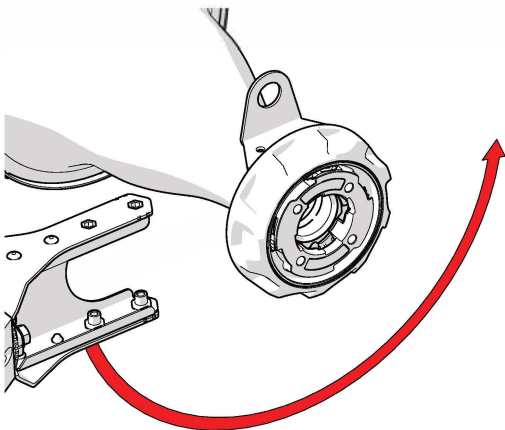


Pre - Installation Left side of the pole

Ensure that the front plate of the bracket is oriented toward the front of the antenna.

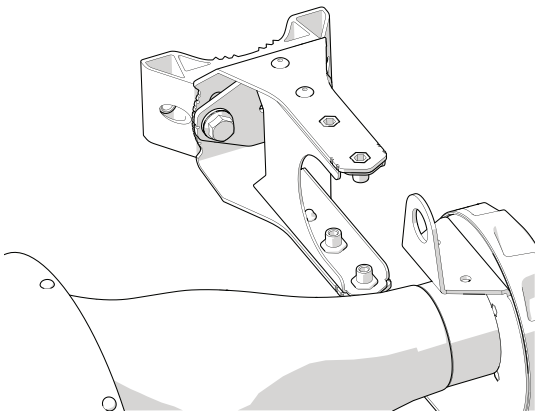

Use 5 mm Hex Key to tighten the four screws.

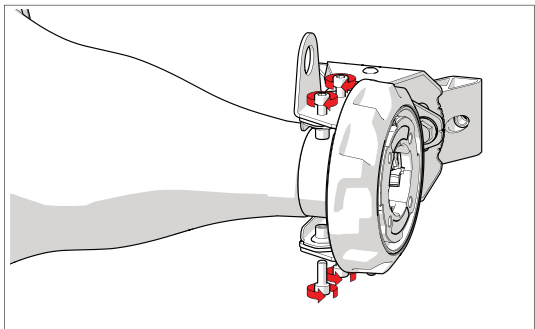



RF elements s.r.o.

www.rfelements.com